


HA112, Europe (EU)

Short manual







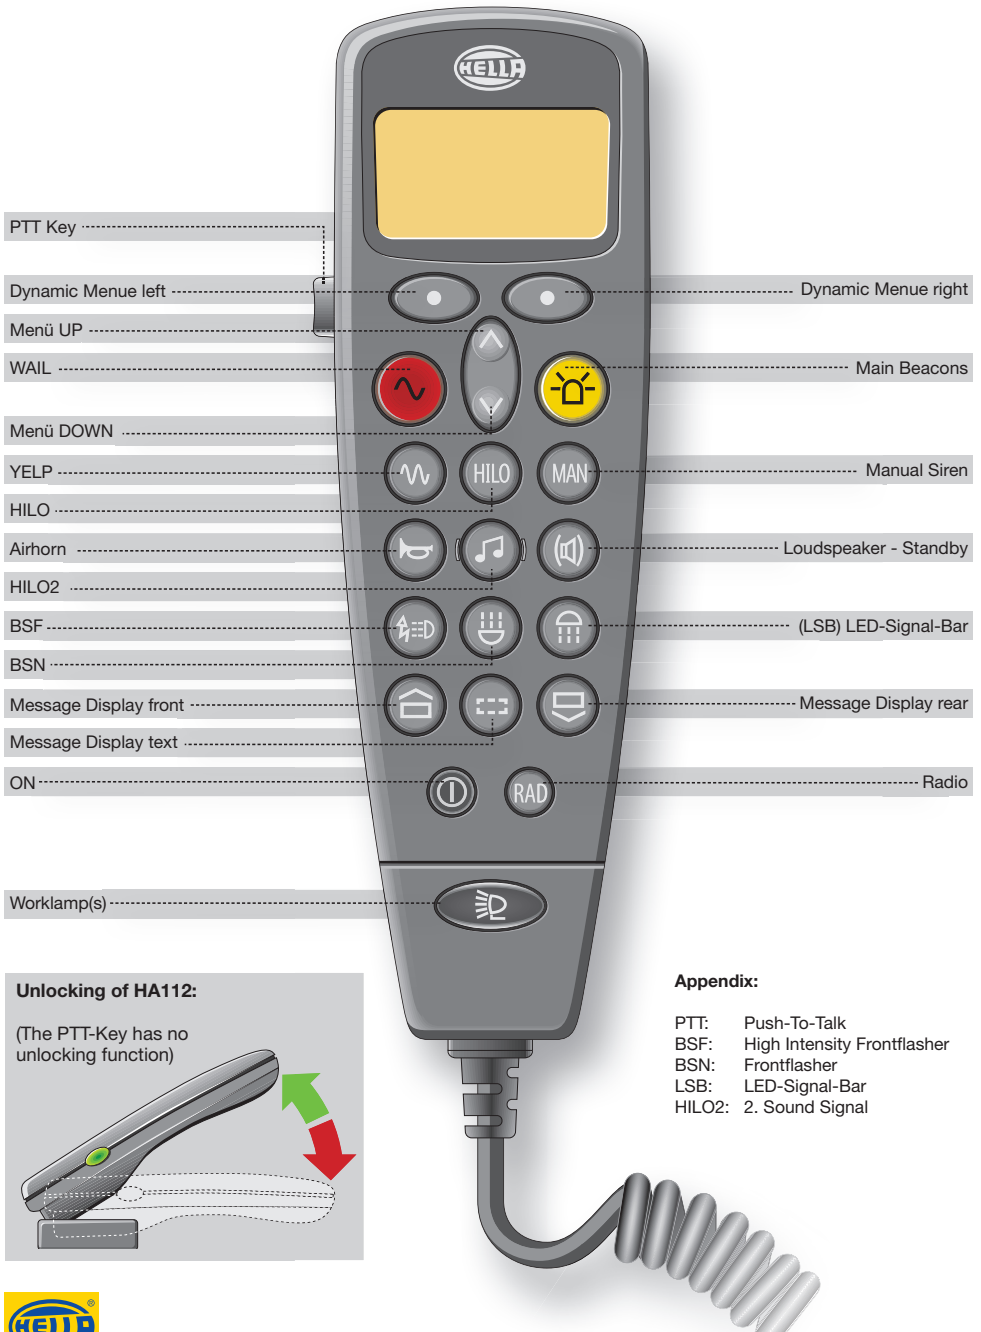















## Europe (EU), Overview





















# Main functions

|  |  |  |
|--|--|--|
| <b>WAIL</b><br><br>On / Off<br>Activates acoustical and optical functions                              | <b>Navigation Keys</b><br>  | <b>Mainbeacons</b><br><br>On / Off<br>Activates Mainbeacons   |
| <b>YELP</b><br><br>On / Off<br>Activates acoustical and optical functions                              | <b>HILO</b><br><br>On / Off<br>Activates acoustical and optical functions   | <b>Manual Siren</b><br><br>Push to activate   |
| <b>Airhorn</b><br><br>On / Off<br>Activates acoustical and optical functions                           | <b>HILO 2</b><br><br>On / Off<br>Activates acoustical and optical functions   | <b>Standby</b><br><br>If set and car horn is activated:<br>One sound sequence will emitted                    |
| <b>High Intensity Frontflasher (BSF)</b><br><br>On / Off<br>Activation possible only with main beacons | <b>Frontflasher (BSN)</b><br><br>On / Off<br>Activation automatically via main beacons                                    | <b>LSB LED-Signal-Bar</b><br><br>Activates Menue Flash pattern selection                                      |
| <b>Message Display Front</b><br><br>On / Off   | <b>Message Display</b><br><br>Activates Menue Message selection via navigation keys<br>* indicates the selected message | <b>Message Display Rear</b><br><br>On / Off   |
| <b>Standby</b><br><br>Push to activate or turn ignition key  | <b>Worklamps</b><br><br>Activates Menue Worklamps front Alley Lights left / right                                       | <b>Radio</b><br><br>On / Off<br>If Switchbox installed radio broadcast will be patched through loudspeakers |



# HA112, Europe (EU)

| Key   | Display  | Selection   |
|---|--|---|
| <b>Basic Setting</b><br>               |    <p>...</p> | Day / Night-Function*<br><br>Volume of Microphone decrease / increase<br><br>Special Settings   |
| <b>Sound Setting</b><br>                |   <p>...</p>   | Deactivation of front / rear beacons * front or rear<br><br>Day / Night-Function*   |
| <b>Main Beacon Setting</b><br>         |   <p>...</p>   | Day / Night-Function*<br><br>Deactivation of front / rear beacons * front or rear   |
| <b>LSB LED-Signal-Bar Setting</b><br> |   <p>...</p>  | List of LSB-Flash-Pattern*<br>Animated icon shows flash pattern<br><br>Slow / fast selection On / Off   |
| <b>Message Display Setting</b><br>   |   <p>...</p>   | List of Messages* indicates the selected message<br><br>Lip-Icon activates Menu for message display languages*<br>Pencil-Icon activates free programmed messages* |

\* Functions and visualizations could deviate due to lightbar configuration, country specific regulations and lightbar programming.  
 Technical data is subject to change without notice.  
 For a detailed description of the lightbar function and operation of the control unit refer to installation and mounting CD-ROM.