

Anziehvorschrift für Zylinderkopf		152.720 passend für / suitable for adaptable à / adaptable a Mazda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

707.660
M 11 x 105

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

8	4	1	5	9
7	3	2	6	10

Anziehen/ Tightening/ Serrage/ Apriete

⚙	17-22 Nm
➤	85-90°
➤	85-90°

Zeichenerklärung / Explanations / Explication / Explicacion

⚙	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
✱	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 ÷ 0,95 mm / Ø 84,0 mm
 Mot. FS / FS-DS 2,0 ltr.
 4 Cyl. 1991 ccm Ø 83 mm

 626 GF/GW 5/1997 >
 MPV II 9/1999 >

ElringKlinger AG, Max-Eyth-Str.2
 72581 Dettingen / Erms. Tel. 07123/724 601
 