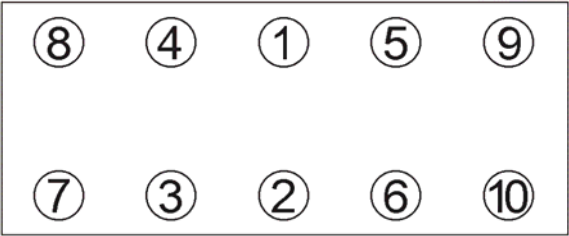


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		851.110 passend für / suitable for adaptable à / adaptable a PSA	 Das Original								
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo											
 129.950 M 11 x 159		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 									
Anziehen/ Tightening/ Serrage/ Apriete											
<table border="0"> <tr> <td></td> <td>60 Nm</td> </tr> <tr> <td></td> <td>20 Nm + 100°</td> </tr> <tr> <td></td> <td>100°</td> </tr> <tr> <td></td> <td>100°</td> </tr> </table>					60 Nm		20 Nm + 100°		100°		100°
	60 Nm										
	20 Nm + 100°										
	100°										
	100°										
Zeichenerklärung / Explanations / Explication / Explicacion											
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos							
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)							
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo							
	Setzzeit	relaxation time	durée de tassement	tiempo de espera							
	Drehwinkel	torque angle	angle de serrage	ángulo de giro							
Motortyp / Engine type / Type de moteur / Tipo de motor Mot. XU 7JP4 1761 ccm Xantia 306											
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601											