


Anziehvorschrift für Zylinderkopf	864.100 passend für / suitable for adaptable à / adaptable a Honda	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



706.150
M 12 x 163/199

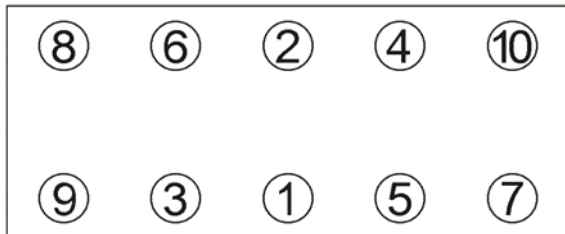

Anziehen/
Tightening/
Serrage/
Apriete



Mot. F18A../F20A..
Mot. F22A..
40 Nm
70 Nm
108 Nm



Mot. F20Z...
40 Nm
70 Nm
100 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,20, Ø 85,9mm

Accord IV CB3, CB7 1990>1993

Prelude IV BB3 02/1992>09/1996

Prelude V BB9 10/1996>

Mot. F20A2/A4/A6/A8/F22A3

Accord CC7,CE7,CE8 1990>1998

Mot. F20Z1/Z2, 1997 ccm, 85/96 kW (116/131 PS)

F18A3, 1850 ccm 85 kW (116PS)

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

