

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

864.250

passend für / suitable for
adaptable à / adaptable a

Honda



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



93157

862410

022.590

M 10 x 1,25 x 120

Anziehen/
Tightening/
Serrage/
Apriete



20 Nm
49 Nm
67 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 0,70 mm Ø 75,9 mm

Civic IV
EJ6, 1,6i, Mot.D16Y7

Civic V
EJ9,MB8,MB2 1,4i, Mot.D14A3/A4/A7/A8

EK3, 1,5i, Mot.D15Z6

Accord VII
Mot. D16B6 10/1998>

EK1 1,6i, Mot. D16Y5

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

