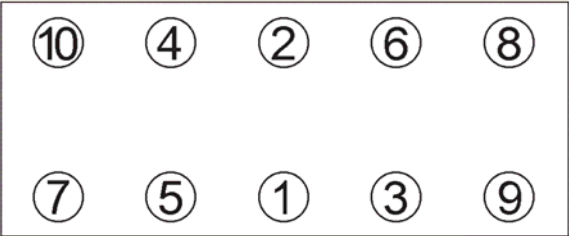


Anziehvorschrift für Zylinderkopf	475.920 passend für / suitable for adaptable à / adaptable a Volkswagen/Audi/Skoda	 Das Original		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
 804.870 M 10 x 115	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 			
Anziehen/ Tightening/ Serrage/ Apriete				
40 Nm 90° 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 1,6 Ltr. ÷ 1,25 mm Ø 82,5 Audi A3 09/1996 > Bora 09/1998 > Golf 01/1998 > Polo 10/1999 >				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				